


Kurzanleitung WICOS®

Dialogeinheit

DE-22 (E)

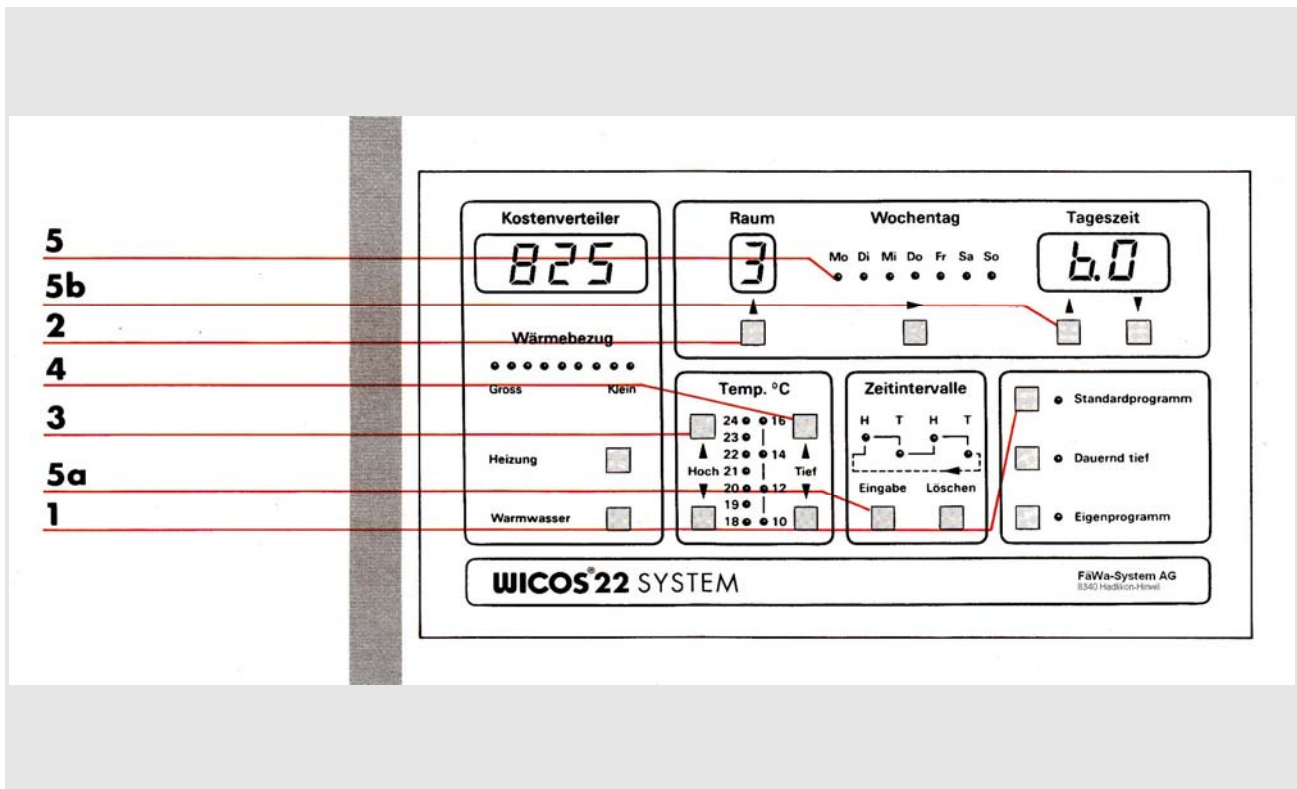

INDIVIDUAL PROGRAM



Time of heating:

selectable from Monday to Sunday (with one reduced heating phase, if required)

Temperature:

to be determined individually per room

Note on a piece of paper which temperature you desire for each room.

Determine the starting-H (high) and ending-T (low) per room, and if required, the time in which it should not be heated during the day. (Intermediate time, resp. reduced heating phase does not have to be set).

a + b = to be determined for each room

1 Press "Eigenprogramm" if the lamp goes out press again

2 Select the room

3 Select the day-temperature

4 Select the night-temperature

Select points 2 to 4 for all rooms

5 When should be heated?

Put in separately for each room. Start with Monday (Mo)

Important: If no intermediate time (reduced heating phase) is required, the button "Eingabe" has to be pressed from the 1. "T"-time on until to the starting point. (1. "H")

a) Press button "Eingabe" until/or to 1. "H"

b) Put in starting time, e.g. 07.00

c) Press "Eingabe", put in time for "T" (e.g. 09.00)

Press "Eingabe", put in time for 2. "H" (e.g. 16.30)

Press "Eingabe", put in time for 2. "T" (e.g. 22.00)

Press "Eingabe", up to 1. "H" and select next day for same room.

Back to index b and repeat from b) on.

Especially:

By pressing the key at 16° and key at 24° together the lowest temperature can be selected even higher than 16°.

Important:

If, for each room, the key "Löschen" is pressed over the H-T-H-T points, the day time of the Standardprogramm (Standard program) is displayed, therefore only the deviation in the day time routine of the Eigenprogramm (individual program) has to be extended.

STANDARD PROGRAM



Time of heating:

from Monday to Sunday same time of heating for all rooms

Temperature:

to be determined individually per room

Note on a piece of paper which temperature you desire for each room as well as the starting - H (high) and ending - T (low) which are valid for the whole week.

1 Press "Standardprogramm" when lamps go out press again

2 Select the room

3 Select the day-temperature

4 Select the night-temperature

Determine points 2 to 4 for all rooms

5 When should be heated?

a) Press button "Eingabe" up to 1. "H"

b) Put in starting time, e.g. 07.00

c) Press "Eingabe", put in ending time for "T", e.g. 22.00

d) Press "Eingabe" up to 1. "H"

Kontakt

Hauptsitz

FäWa-System AG
Breitenwiesstrasse 6
CH-8340 Hadlikon-Hinwil
Tel. : +41 (0)44 938 05 38
Fax : +41 (0)44 937 22 73
info@faewa-system.ch
www.faewa-system.ch

Büro Bern

FäWa-System AG
Bahnhofstrasse 5
CH-3422 Kirchberg
Tel. : +41 (0)34 445 74 84
Fax : +41 (0)34 445 74 85
kirchberg@faewa-system.ch

Büro Winterthur

FäWa-System AG
Else-Züblin-Strasse 21
CH-8404 Winterthur
Tel. : +41 (0)52 741 44 11
Fax : +41 (0)52 741 44 84
winterthur@faewa-system.ch

Copyright

© 2009 FäWa-System AG / Alle Rechte sind weltweit vorbehalten.

Dieses Handbuch darf ohne ausdrückliche, schriftliche Genehmigung der FäWa-System AG weder teilweise noch als Ganzes in irgendeiner Form reproduziert, übertragen, umgeschrieben oder übersetzt werden.

Verzichtleistung

Die FäWa-System AG übernimmt keinerlei Haftung oder Garantie bezüglich des Inhalts dieses Handbuches und insbesondere gegenüber jeglicher auferlegter Händler- oder Eignungsgarantie für besondere Zwecke.

Weiterhin behält sich die FäWa-System AG das Recht vor, diese Publikation zu revidieren und von Zeit zu Zeit Änderungen des Inhalts vorzunehmen ohne jegliche Verpflichtung der FäWa-System AG, einer Person oder Organisation von einer derartigen Revision Mitteilung zu machen.

Markenzeichen

WICOS® ist ein eingetragenes Markenzeichen der FäWa-System AG